



**SALVA VERTICAL ROD FIRE RATED EXIT DEVICE-
REVERSIBLE
INSTALLATION INSTRUCTIONS
LHR door shown, RHR door opposite**

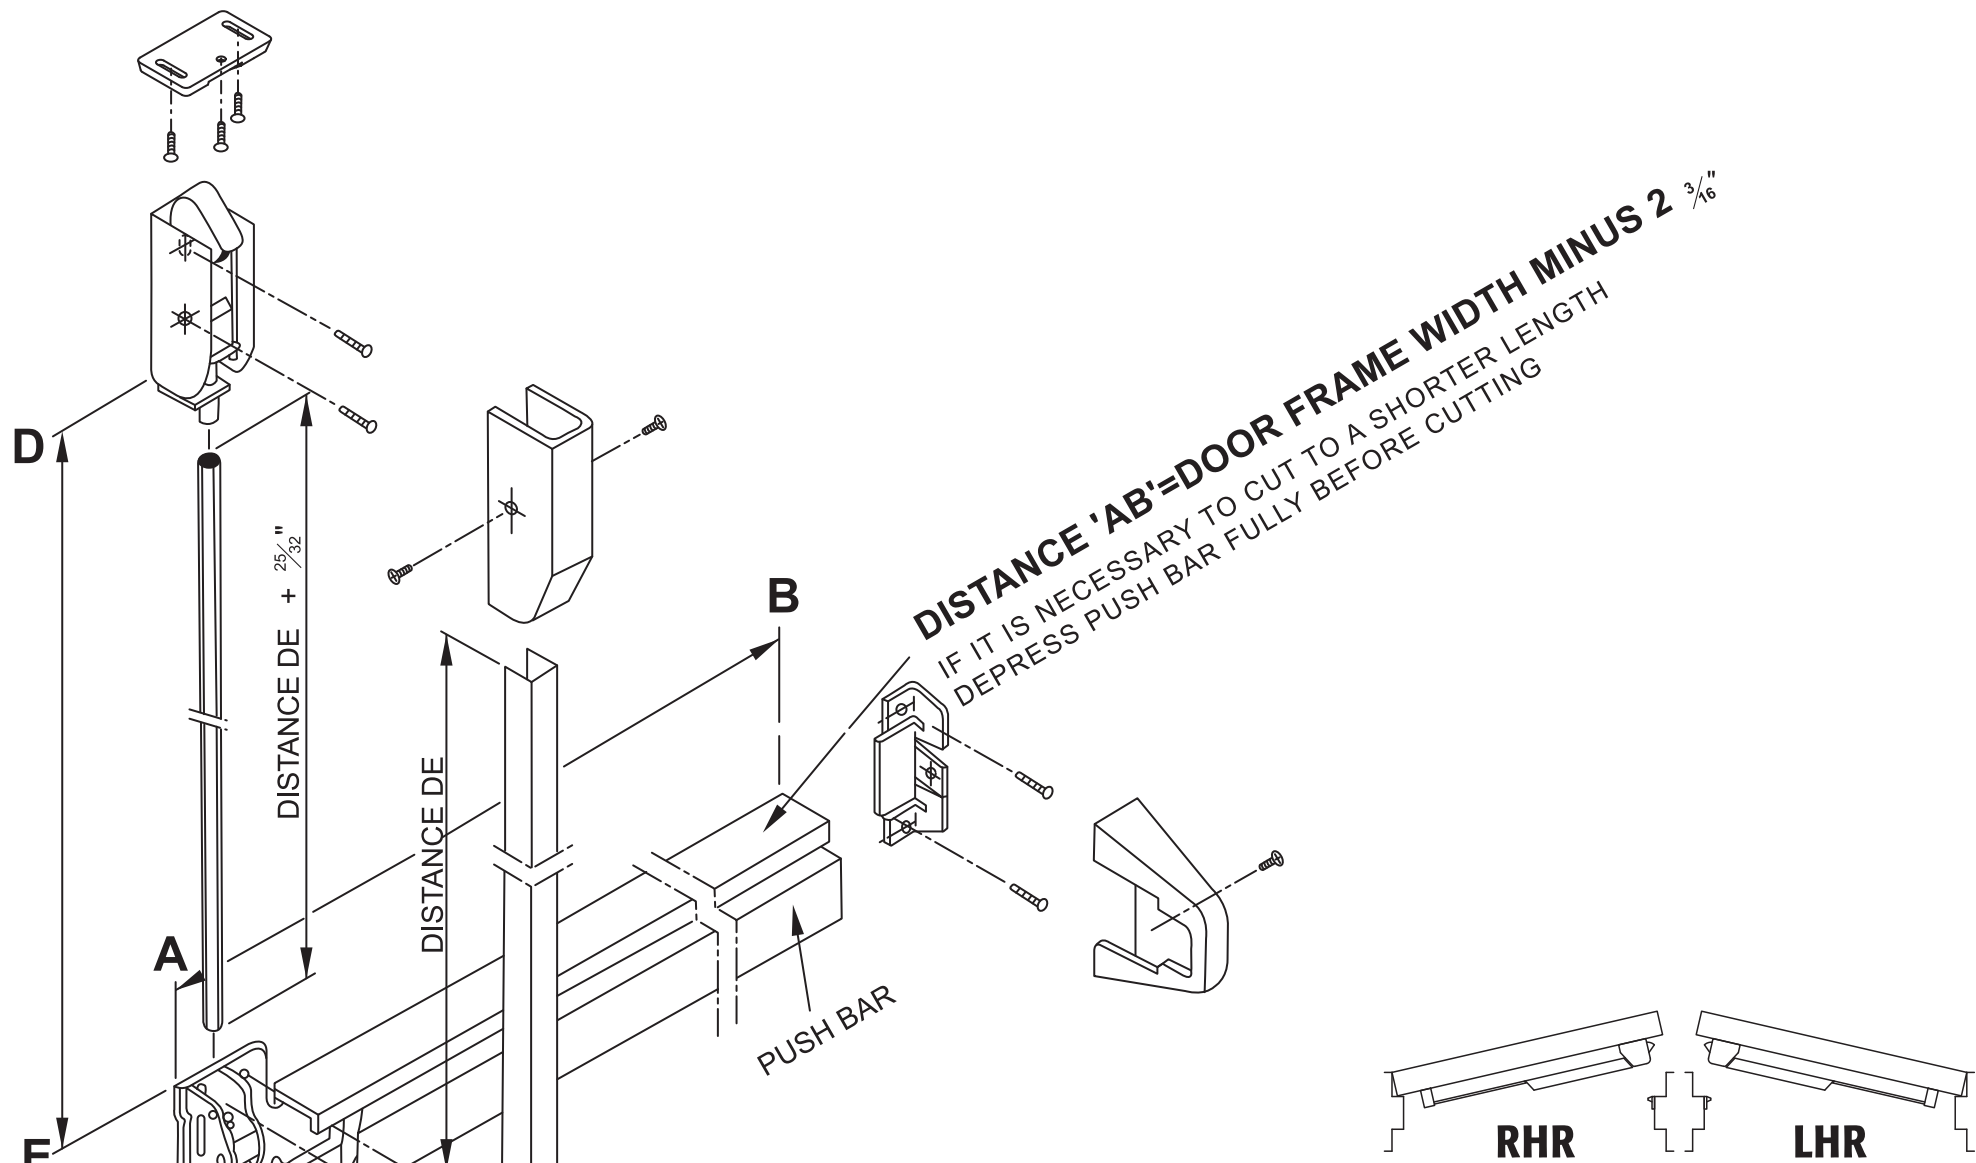


37-8002-3000-00-30-11
37-8002-3000-00-60-11




1. Turn the threaded rod clockwise about 15mm to 20mm into the bottom latch




2. Push the bar first and then pull the threaded rod in order to turn it 5mm to 10mm into the connection anticlockwise




3. Push the top latch in order to turn the threaded rod anticlockwise 15mm to 20mm into the top latch



4. Push the bar again and turn the threaded rod into the connection clockwise about 5mm to 10mm




5. Test the movement, and then tighten the nut, put on all the other parts.

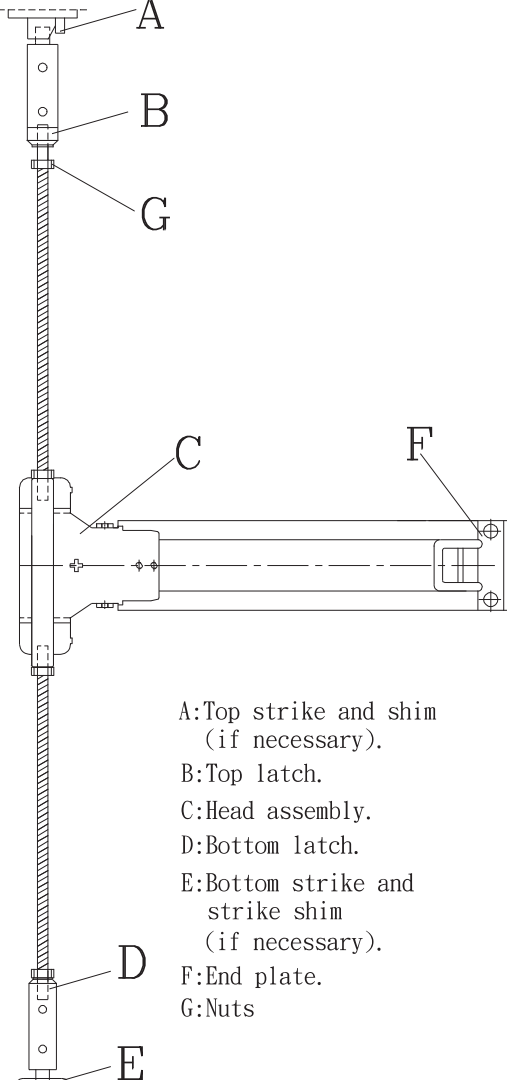

A:Top strike and shim (if necessary).
B:Top latch.
C:Head assembly.
D:Bottom latch.
E:Bottom strike and strike shim (if necessary).
F:End plate.
G:Nuts

37-8002-3000-00-30-11
37-8002-3000-00-60-11

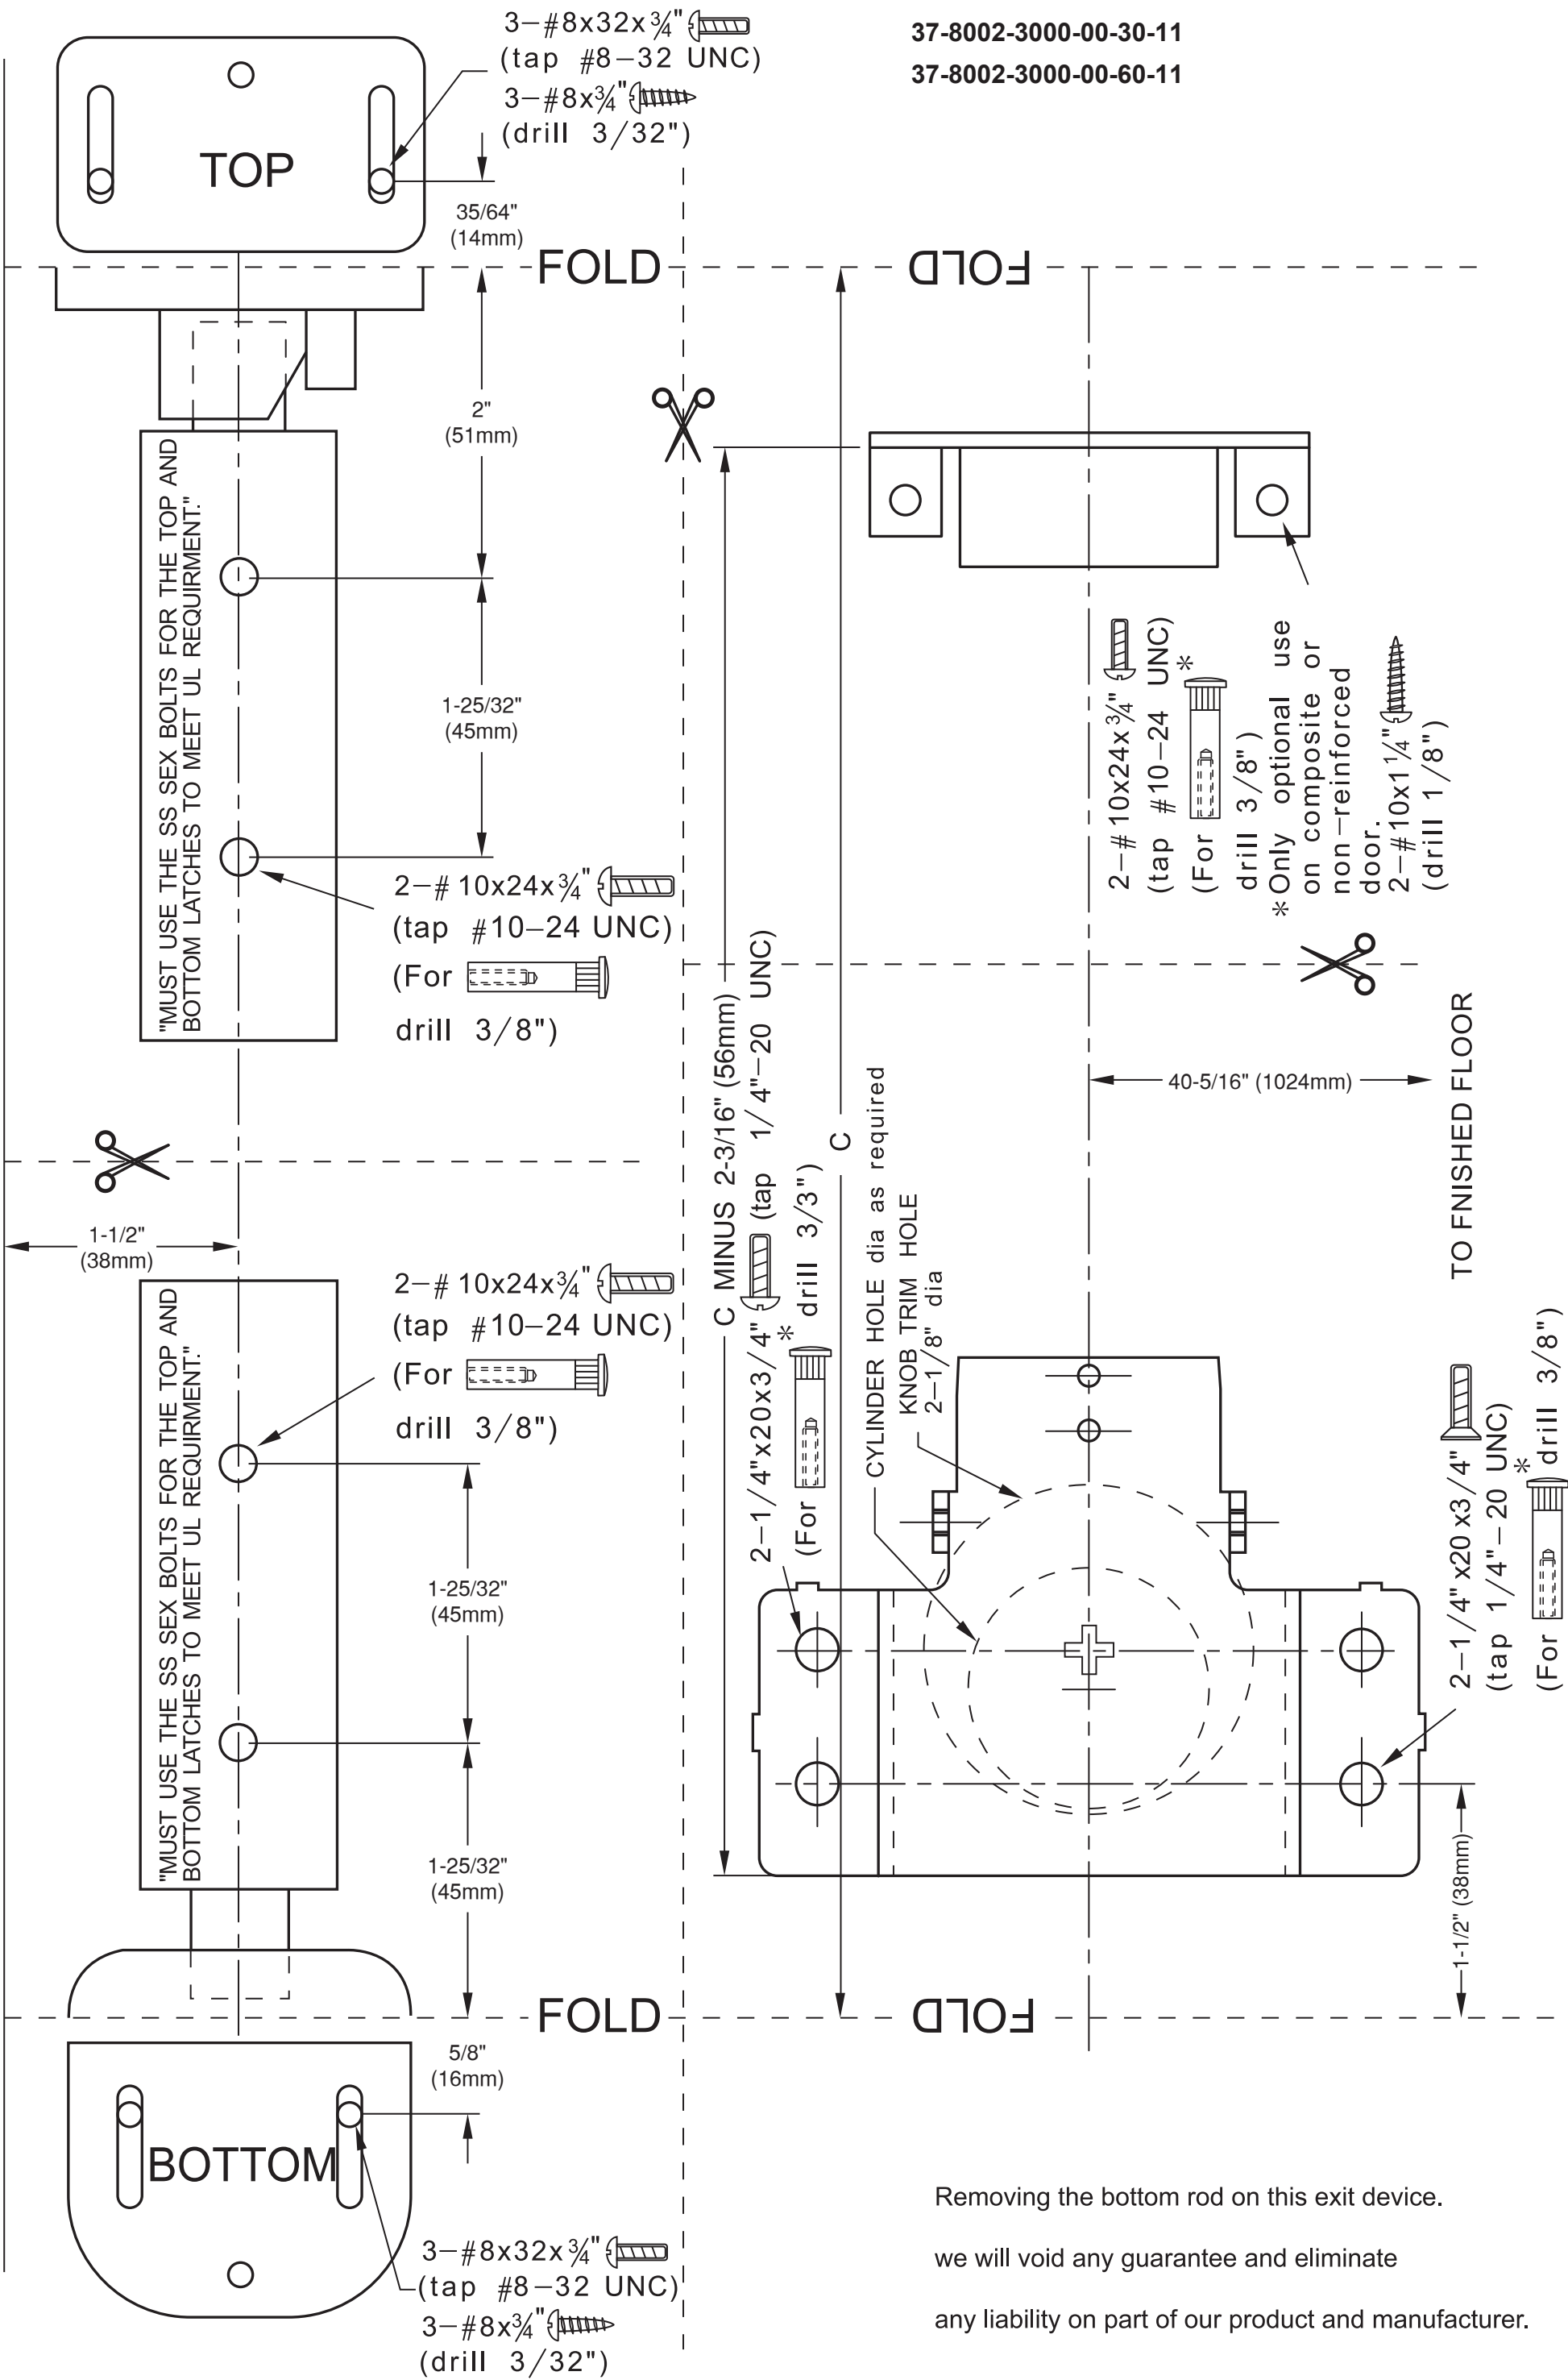

Removing the bottom rod on this exit device.
we will void any guarantee and eliminate
any liability on part of our product and manufacturer.